



# HTC Desire V Earpiece Speaker Replacement

This guide will show you how to remove and replace the earpiece speaker of the HTC Desire V Smartphone.

Written By: William McCusker



## INTRODUCTION

This guide will show you how to remove and replace the earpiece speaker of the HTC Desire V Smartphone.

---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Spudger](#) (1)
  - [T5 Torx Screwdriver](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Battery



- Gently pry back cover away from phone
- If you are having difficulty you may need to use a Spudger or plastic opener


## Step 2



- Lever the battery out from the bottom end first.
- If you have trouble you can use the opening tools or the spudger again



## Step 3 — Midframe

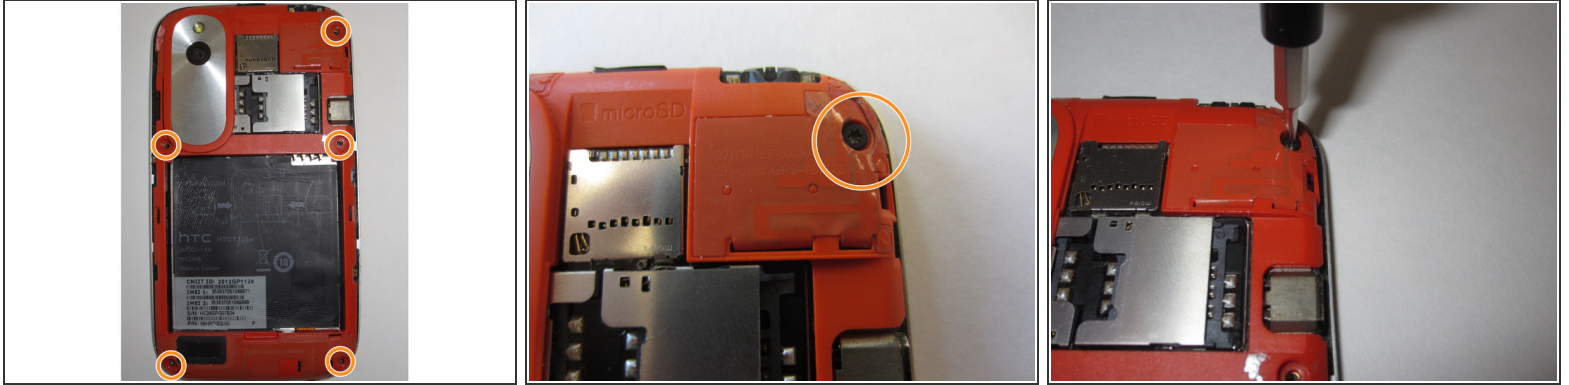

- Unscrew and remove five 3.0 mm black torx screws at the positions circled in orange.
- Use a Torx T5 screwdriver

## Step 4




- Using an opening tool or a spudger, gently remove the plastic backing

## Step 5 — Button Assembly



- Remove the connector on left side of the Navigation board by unplugging/prying the orange ribbon
- Use a spudger or the opening tools if you have trouble disconnecting


## Step 6

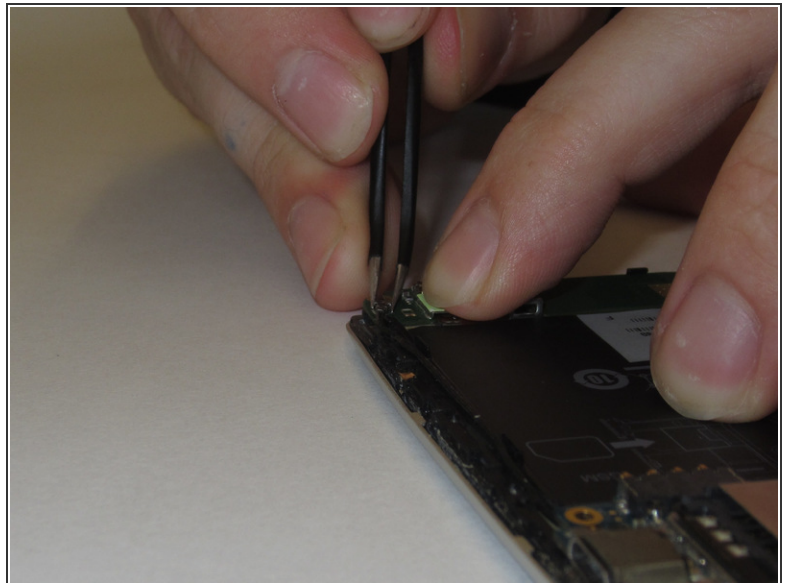

- Gently unplug and remove aerial cable (black antenna) from bottom plug
- If you lack usable nails, you will need tweezers




## Step 7

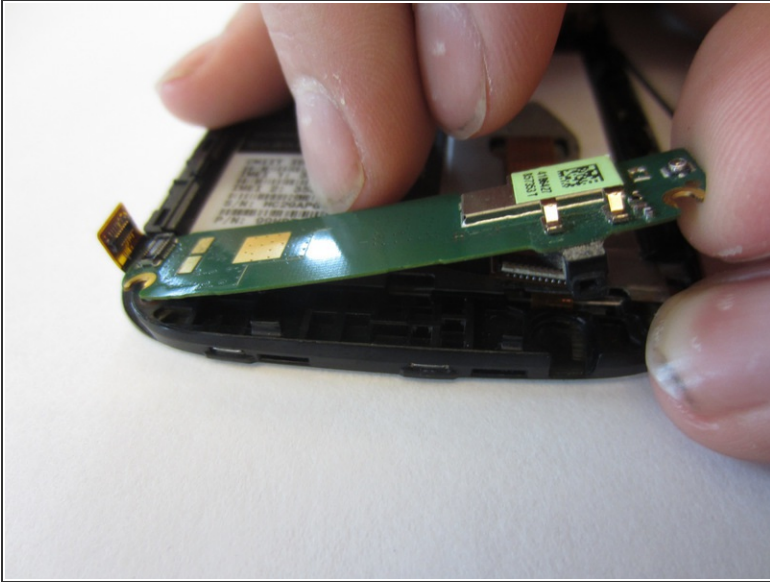


- Nav Board will be stuck down by glue
- Pull gently from the right end of the board, being careful of it's flexibility

## Step 8 — Vibration Motor

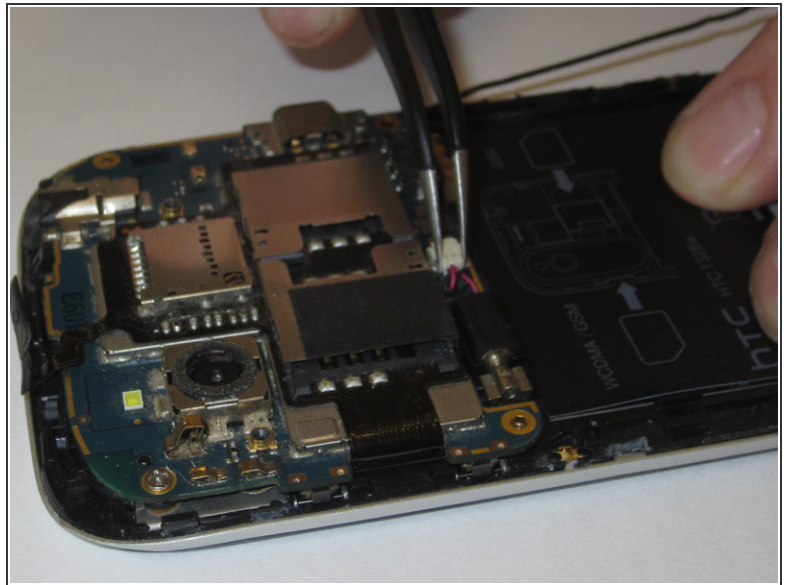

- Unplug the vibration motor shown from the white plug on the motherboard
- You will probably need tweezers to do this

## Step 9

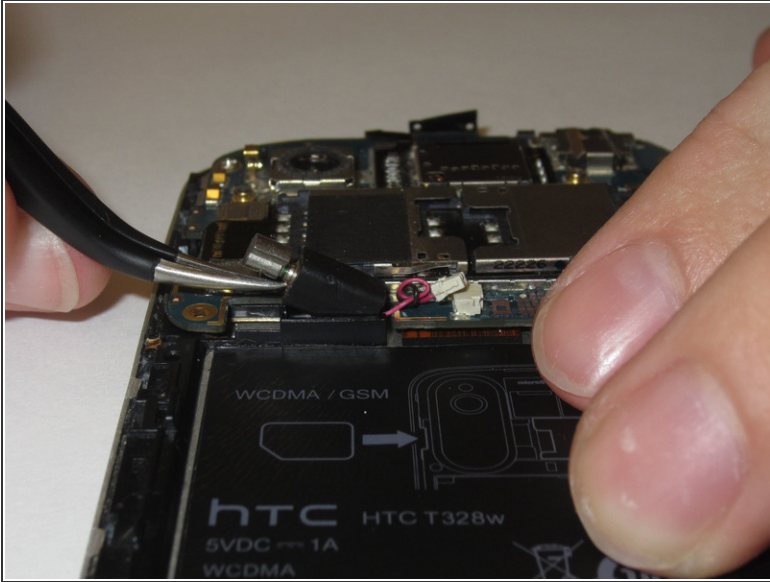

- Gently remove the motor from its housing in the phone's chassis
- The easiest way to do this is to lever the motor out by its rotating end using the tweezers


## Step 10 — Motherboard Assembly



- Remove the black information sticker if this is the first time opening the handset




## Step 11

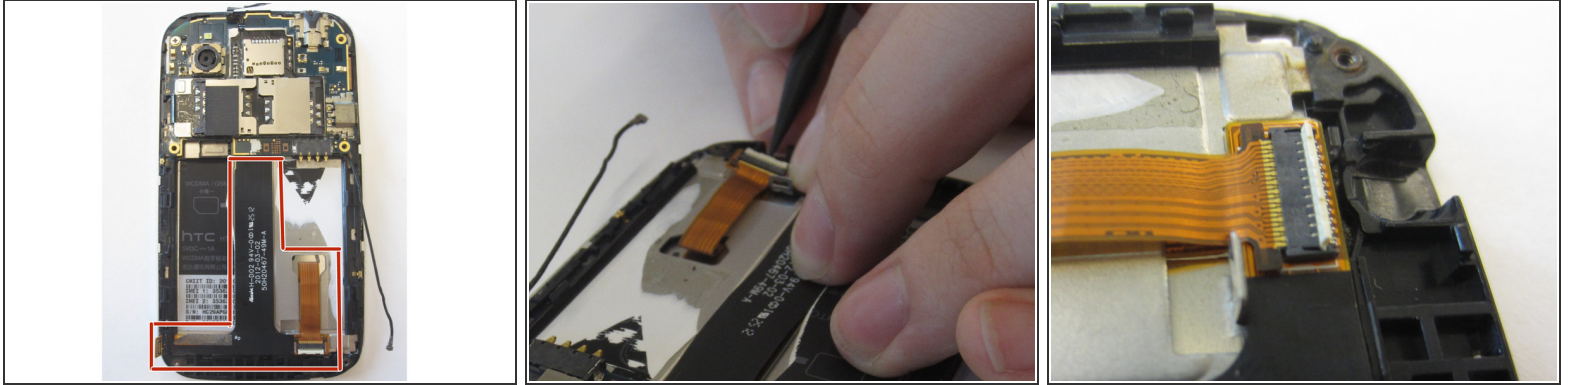

- You should now see a black ribbon cable, which was connected at the left to the Nav board, and on the right, to a gold ribbon cable which goes to the screen
- Unlock the gold ribbon cable connecting screen to logic board by lifting the locking tab at the back of the socket
- For this you may wish to use a spudger or tweezers



## Step 12

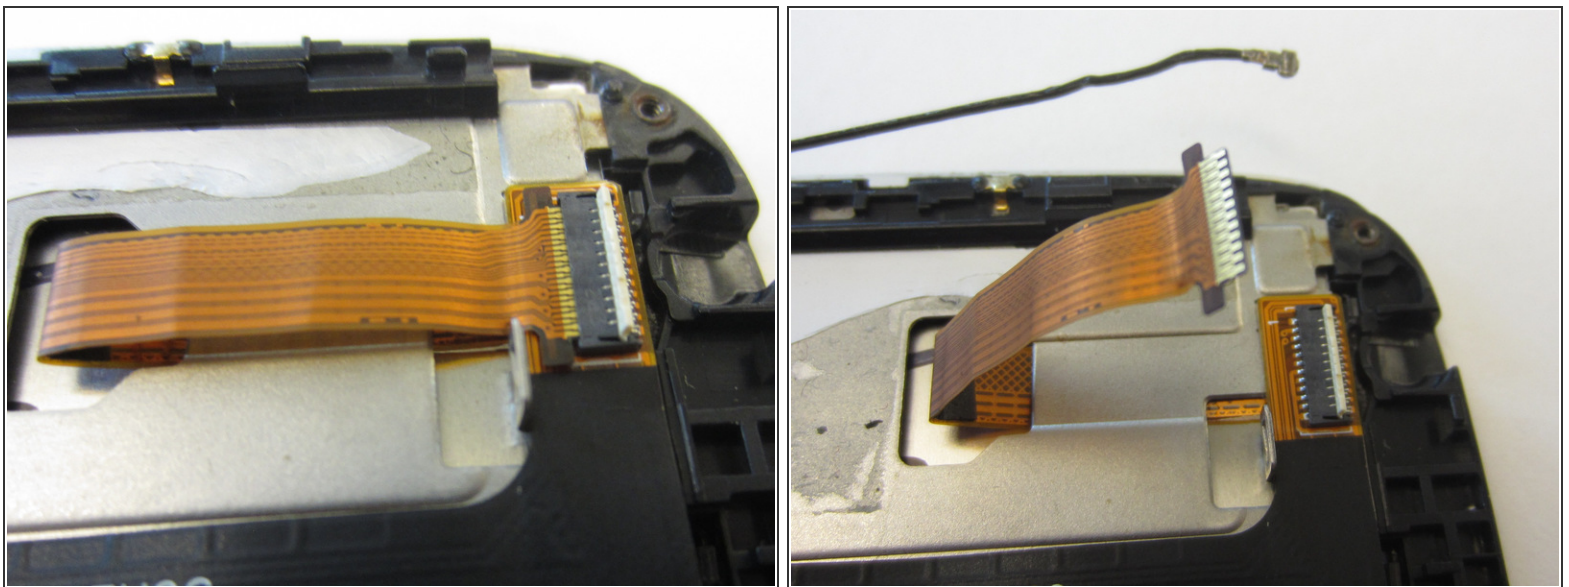

- Disconnect gold ribbon cable connecting screen to logic board by pulling cable out gently




## Step 13

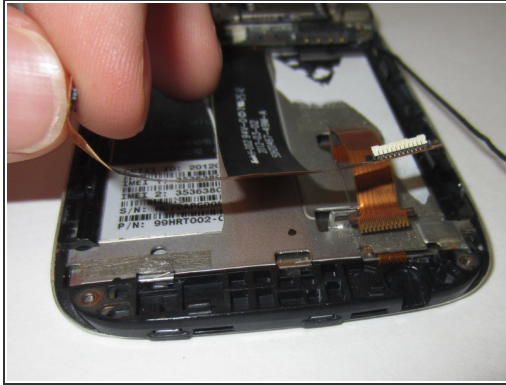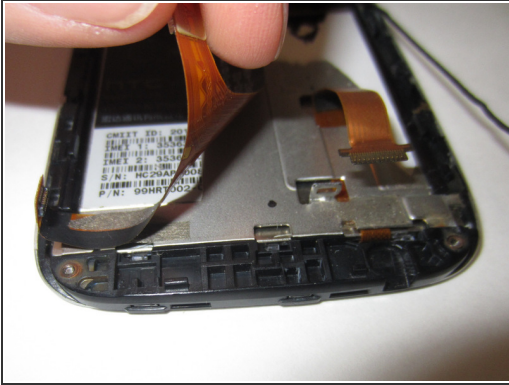


- Gently unstick black ribbon cable from the chassis

## Step 14

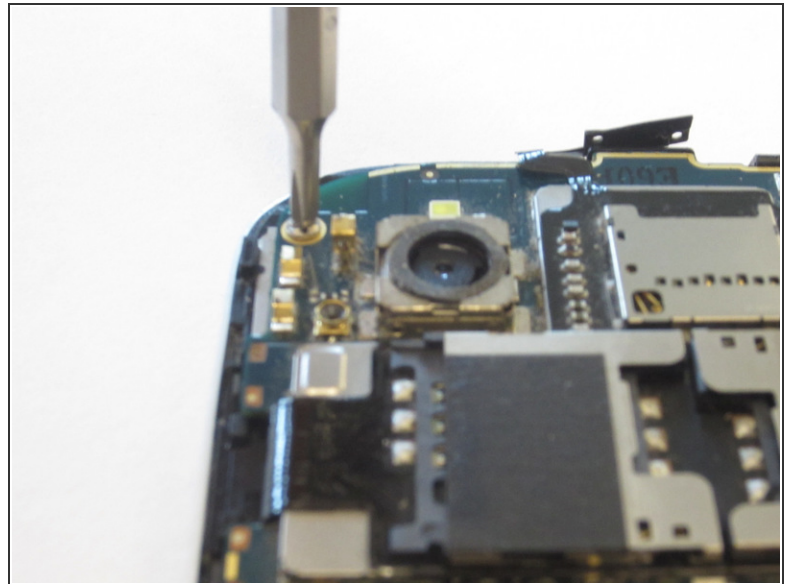




- Unscrew the 2mm silver screw from top left
- Use a Phillips PH00 Screwdriver for this

## Step 15

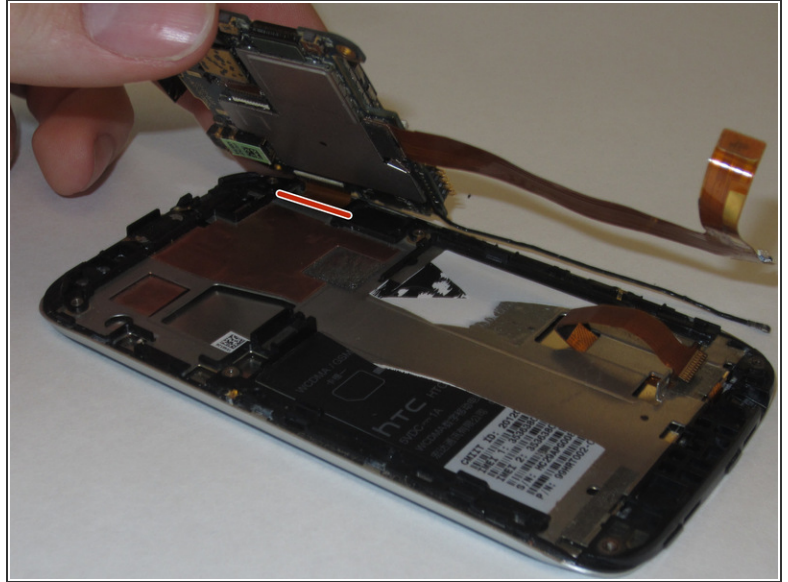

- Gently pry logic board from the casing by lifting the left side up, as if there was a hinge on the right, folding it over the right edge where you will see a gold/orange ribbon cable


## Step 16

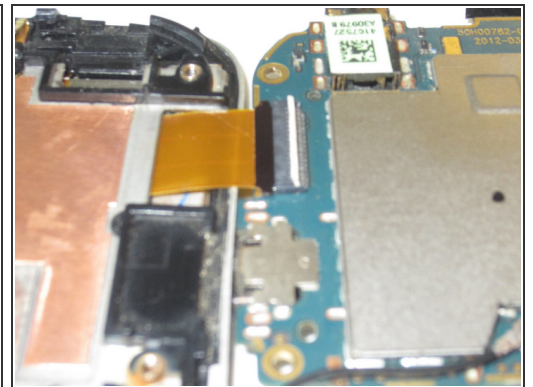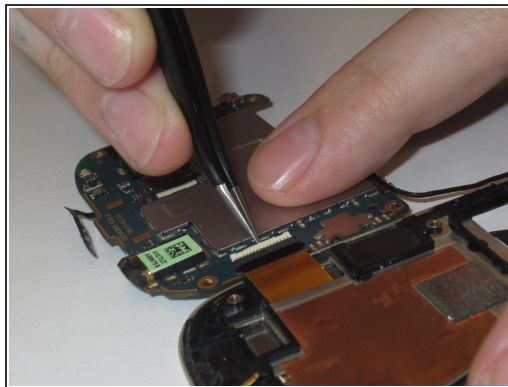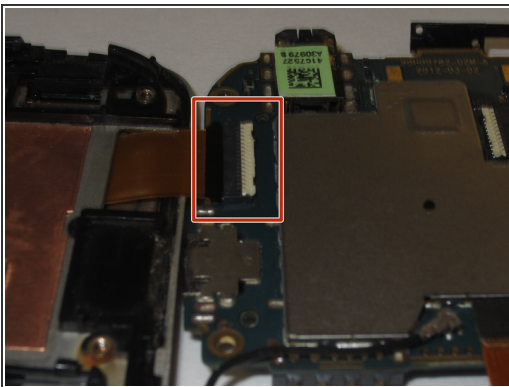

- Remove the gold ribbon cable by lifting tab at the back of the socket, using a spudger or tweezers




## Step 17

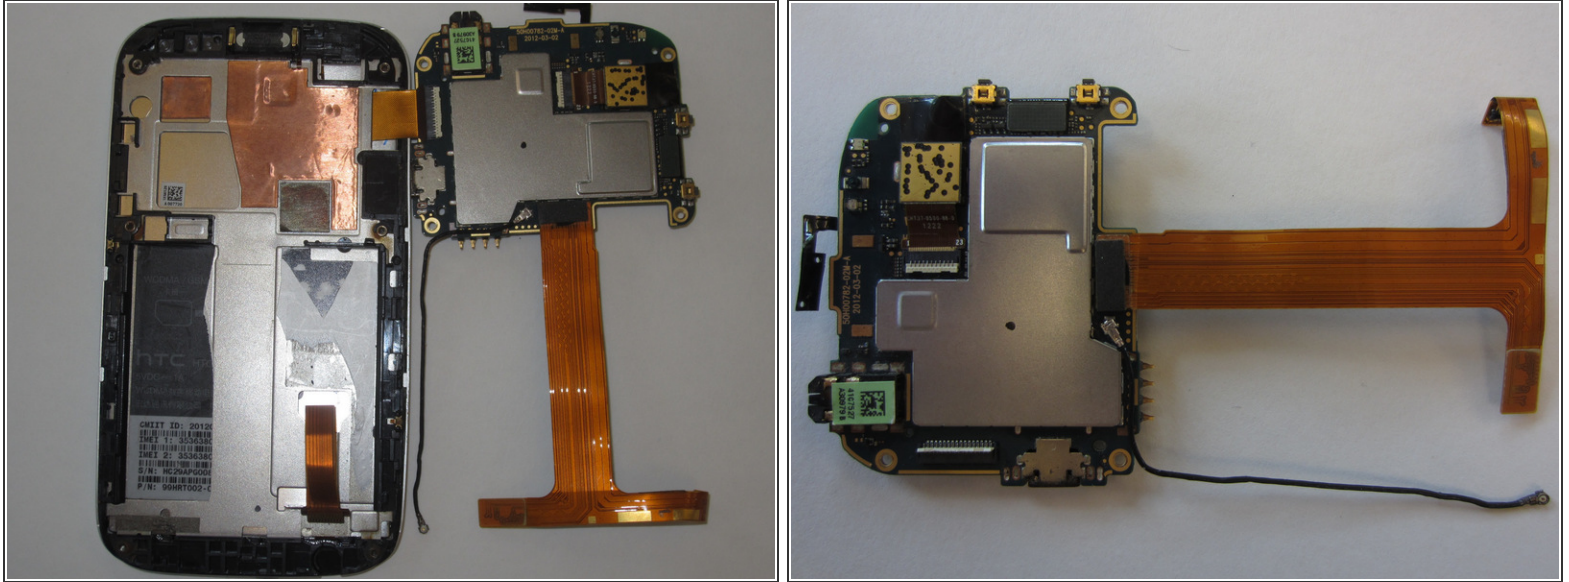

- Gently pull the logic board to the right and it will disconnect from the chassis

## Step 18 — Earpiece Speaker

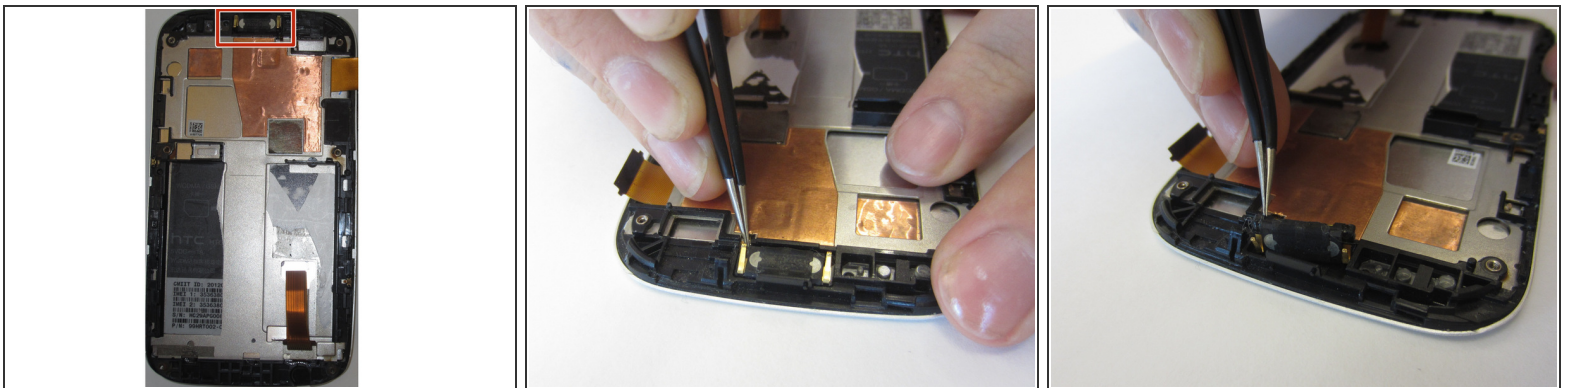

- At the top of the phone is the speaker, with two gold coloured connectors
- It is magnetic
- At the right hand side there is a space, where using the fine tweezers you can gently pry the speaker from it's housing

## Step 19



- Make sure you don't lose the speaker, as it is very small and can stick to metal objects

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-19 02:00:11 AM.